










TREKSTOR™

Enjoy now.

How to change the display language of the **i.Beat xtension FM**

If the display of your **i.Beat xtension FM** is not in English, please follow the instructions below to select English as language.

- a) Turn on the **i.Beat xtension FM** by briefly pressing the  button.
- b) Hold the  button for about one second to enter the mode selection. The first mode displayed is "Music", indicated by a music note symbol.
- c) Press the  button 4 times until it highlights "SYSTEM" (indicated by a folder and a magnifying glass).
- d) Press the  button once to enter the "SYSTEM" mode.
- e) Press the  button once, until it highlights the language settings option (indicated by an "ABC" icon).
- f) Press the  button once to enter the language settings option. The player will display a language, e.g. "ESPAÑOL".
- g) Press the  button repeatedly until the display shows "ENGLISH".
- h) Press the  button once to select English as language.
- i) Briefly press the  button two times to exit the "SYSTEM" mode and the mode selection.

