



Language selection if German is set as default language:

After switching on the device, the start screen appears. To set the user interface to the desired language, please tap inside the  "Einstellungen" and afterwards on  "Sprache und Eingabe". Tap now in the right column on the first field "Sprache" and select your language.

