

**TREKSTOR**<sup>®</sup>  
Enjoy now.



**SurfTab**<sup>®</sup> breeze 7.0 quad 3G

**OPERATING INSTRUCTIONS**

EN

<b>1) About the SurfTab breeze 7.0 quad 3G.....</b>	<b>4</b>
<b>2) Safety information .....</b>	<b>5</b>
Operational safety .....	5
Repair .....	6
Intended operating conditions .....	7
Power supply.....	7
Care and maintenance .....	7
Information on the memory capacities indicated .....	7
<b>3) Technical specifications .....</b>	<b>8</b>
<b>4) Package contents .....</b>	<b>8</b>
<b>5) Controls and connections .....</b>	<b>10</b>
<b>6) Charging the SurfTab .....</b>	<b>10</b>
<b>7) Switching on the SurfTab .....</b>	<b>10</b>
<b>8) Elements on the home screen .....</b>	<b>11</b>
<b>9) Using the touch screen .....</b>	<b>12</b>
Scrolling .....	12
Selecting an element .....	13
Enlarging and reducing the view .....	14
Using the display keyboard .....	14
<b>10) Personalising the home screen .....</b>	<b>14</b>
Adding apps to the home screen .....	15
Adding widgets to the home screen.....	15
Removing apps and widgets from the home screen .....	15
Changing the screen background.....	15
<b>11) Setting up a screen lock .....</b>	<b>16</b>
<b>12) Connecting to the Internet via WiFi .....</b>	<b>16</b>
<b>13) Connecting to the Internet via 3G.....</b>	<b>17</b>
Inserting the SIM card .....	17
Defining settings for 3G mode .....	18

Removing the SIM card .....	19
<b>14) Setting up/removing an email account .....</b>	<b>19</b>
Setting up an email account .....	19
Removing an email account .....	20
<b>15) Installing/uninstalling apps .....</b>	<b>20</b>
Downloading and installing apps .....	20
Uninstalling apps .....	21
<b>16) Using the phone function .....</b>	<b>21</b>
<b>17) Using navigation .....</b>	<b>21</b>
Navigating with the SurfTab .....	21
<b>18) Using the camera .....</b>	<b>22</b>
Taking a photo .....	22
Recording a video .....	23
Zooming .....	23
<b>19) Connecting other devices .....</b>	<b>23</b>
Connecting the SurfTab to a computer .....	23
Connecting a USB device .....	24
Connecting another device via Bluetooth® .....	24
Connecting to a television via Miracast™ .....	24
<b>20) Activating standby mode .....</b>	<b>25</b>
<b>21) Reset and recovery mode .....</b>	<b>26</b>
Resetting the SurfTab (Reset) .....	26
Putting the SurfTab into recovery mode/loading the factory settings .....	26
<b>22) Switching off the SurfTab .....</b>	<b>26</b>
<b>23) Notes on copyright and trademarks .....</b>	<b>27</b>
Open Source Software .....	27
<b>24) Notes on disposal .....</b>	<b>28</b>
Disposal .....	28
Recycling .....	28
<b>25) Notes on liability and warranty .....</b>	<b>28</b>

We hope you enjoy your TrekStor SurfTab breeze 7.0 quad 3G. Please read the following passages carefully to familiarise yourself with the functions of this product and how to operate it.

**IMPORTANT!**

Follow the safety information in Section 2.

**IMPORTANT!**

Please keep these instructions in a safe place for future reference. Should the device change hands, pass these instructions on to the new owner.

Up-to-date product information is available on the TrekStor website:  
[www.trekstor.de](http://www.trekstor.de)

Visit [www.trekstor-onlineshop.de](http://www.trekstor-onlineshop.de) for additional products and accessories.

## 1) About the SurfTab breeze 7.0 quad 3G

The TrekStor SurfTab breeze 7.0 quad 3G is a tablet with 7-inch multi-touch IPS screen for surfing the Internet, using apps and playing music, videos and games.

The built-in 3G module makes it possible to surf the Internet while on the go, even without a WiFi connection, and make calls. The integrated GPS module means that the SurfTab can also be used as a navigation device.

Only use the device for its intended purpose. The manufacturer is not liable for damages resulting from improper use. Furthermore, the manufacturer shall not be responsible for damages or loss of data and any subsequent damage caused.

## 2) Safety information

These instructions use the following warning symbols and key words:



**DANGER**

*Indicates possible danger to life and/or danger of severe, irreversible injuries.*



**CAUTION**

*Follow instructions to avoid injuries and material damage.*



**WARNING**

*Follow instructions to avoid material damage.*



**NOTE**

*Further information about the use of the device.*

## Operational safety



**CAUTION**

*Those who, as a result of their physical, sensory or mental capabilities, or lack of experience or knowledge, are not in a position to use the product safely must not be allowed in the vicinity of the product without supervision or instruction by a person responsible for their safety. Supervise children around the product.*



**DANGER**

*Keep packaging materials out of reach of children (e.g., plastic sheets). There is a danger of suffocation.*



**DANGER**

*Some accessories can pose a choking hazard for babies and young children. Keep these accessories out of reach of babies and young children.*



**DANGER**

*Never open the casing of the device or the charger: This may cause an electrical shock, short circuit or fire!*



**DANGER**

*Do not insert any object into the ports or openings of the device or charger: This may cause an electrical shock, short circuit or fire!*

**DANGER**

*Do not cover the device or charger during operation or while charging. This may cause the device/charger to overheat and potentially catch fire!*

**CAUTION**

*This device can generate high sound volumes. Never listen at high volumes for long periods. Doing so can result in immediate or gradual hearing damage. Remember: Permanent hearing damage may only emerge later in life. You may become used to listening to high volumes over time, making them appear normal to you. However, your hearing may have already been damaged. The higher you set the volume, the more quickly your hearing can be damaged.*

**DANGER**

*Your safety is very important to us! Safety always has first priority in road transport. Protect yourself and other road users by operating the device only if the traffic situation allows it and you do not endanger or hinder anyone. Adjust the volume of the device for your safety so that you can continue to react to all the sounds around you. Local legislation in force applies.*

**WARNING**

*Do not exert excessive pressure on the display, as it may break.*



*Avoid using USB cables over 3 m in length.*



*Exposing the device to electrostatic discharge can interrupt the data transfer between the device and the computer or impair the functions of the device. Should this happen, disconnect the device from the USB port and reconnect it or rebuild the WiFi connection from scratch.*

## Repair

**WARNING**

*No parts inside the device require maintenance or cleaning.*

**WARNING**

*Should the device become wet, turn it off immediately. Ensure the device is checked for operational safety before using it again.*

## Intended operating conditions



*Protect the device from extremely high or low temperatures and fluctuations in temperature. Use it at an ambient temperature between 10°C and 40°C.*



*Do not place the device near a heat source and protect it from direct sunlight.*



*Never expose the device to humidity, condensation or moisture.*



*Ensure you use and store the device in a dust-free environment.*

## Power supply



### **CAUTION**

*Only ever use the original charger or a charger with the correct voltage and amperage to prevent damage to the device. If you have to resort to a universal charger, pay attention to the polarity of the charging device as well as the voltage and amperage. Your device may suffer irreparable damage if these specifications are not properly adhered to.*



### **CAUTION**

*Do not use or charge the device if the battery is damaged or leaks.*

## Care and maintenance



*Never clean the surface of the device with solvents, paint thinners, cleaning agents or other chemical products. Use a soft, dry cloth or a soft paintbrush.*

## Information on the memory capacities indicated



*The storage capacity indicated on the packaging and in the technical specifications refers to the total storage capacity of your device. The storage capacity of the device indicated by your operating system may differ from the stated storage capacity, as a portion of the total storage is also used by the operating system and system applications.*

 
### 3) Technical specifications

Processor (CPU)	Cortex A7 quad-core processor, 1.2 GHz
Storage capacity	8 GB
RAM	512 MB DDR3
Graphics processing unit (GPU)	PowerVR® SGX544
Display type	5-point capacitive multi-touch IPS display
Display size	7" (17.78 cm)
Aspect ratio	16:9
Screen resolution	600 x 1024
Interfaces	Micro-USB 2.0 (with host function), audio out / mic in, microphone, camera, memory card reader, 3G (Mini-SIM), GSM, WiFi, Bluetooth®, GPS, compass
Supported memory cards	microSD, microSDHC
Camera	2 MP / 0,3 MP
Dimensions (W x H x D)	108 x 192 x 9.9 mm
Weight	263 g
Housing material	plastic
Operating system	Android™ 4.4.4 (KitKat®)
Supported operating systems	Linux®, Mac OS® (from OS X 10.6), Windows® (Windows 8, 7, Vista®, XP)
Battery	lithium polymer

### 4) Package contents

- TrekStor SurfTab breeze 7.0 quad 3G
- USB cable (Micro-USB / USB-A)
- Power adapter (100 V - 240 V)
- Quick guide
- Product safety and legal information



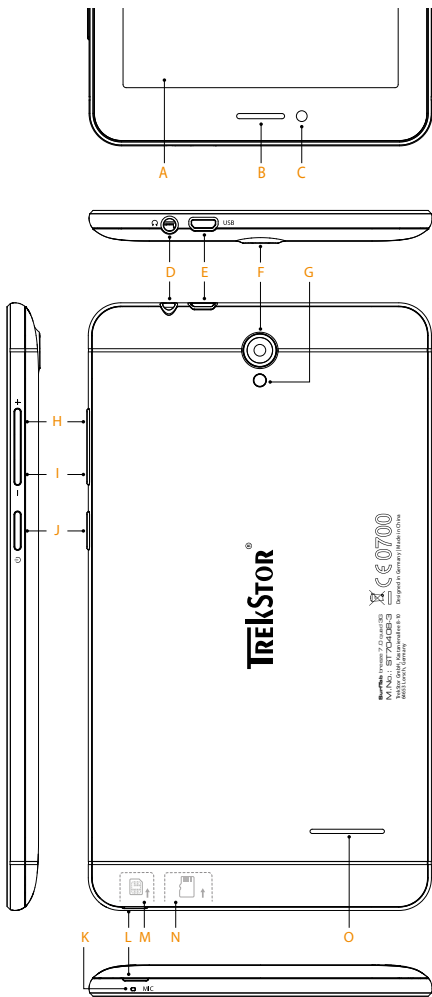

## 5) Controls and connections

- A) Touch screen
- B) Earpiece
- C) Front camera
- D) Audio port
- E) Micro-USB socket / Charging socket
- F) Rear camera
- G) Flash / Video light
- H) Volume +
- I) Volume -
- J) On/off switch
- K) Microphone
- L) Slit for opening the cover
- M) Memory card slot
- N) SIM card slot
- O) Speaker


## 6) Charging the SurfTab

Please fully charge your SurfTab before you use it for the first time. Connect your SurfTab to a plug socket using the USB cable and power adapter. The SurfTab is fully charged when the two-colour status LED turns yellow. Charging via a PC generally take longer than charging via a plug socket.

 *The maximum battery life is reached after approximately ten charging cycles.*

## 7) Switching on the SurfTab

After you have charged your SurfTab, you can switch it on. Press the on/off switch for three to five seconds to start the device. As soon as the device is switched on, the lock screen appears. Place your finger on the lock symbol on the screen and drag the lock symbol to the right to the open lock. Your SurfTab will now display the home screen.

 *If you are using your new SurfTab for the first time, a configuration assistant will appear to help you configure the first important settings on your SurfTab. The settings that you specify here (for example, language or WiFi) can be altered again later on the applications menu under "SETTINGS".*

## 8) Elements on the home screen



 
- A) Google™ language search
- B) Google™ Search
- C) Status display and quick menu  
(swipe the status display on the right downwards to see the quick menu)
- D) Quick start bar
- E) Applications menu
- F) Back to the previous screen
- G) Home icon (back to the home screen)
- H) View all open elements

## 9) Using the touch screen

### Scrolling

The home screen of your SurfTab extends 2 pages to the right of the first window. You can set up these pages by placing apps or widgets on the possible further pages (see Section 10). Slide your finger from right to left (or the reverse) across the screen to access these pages.

**i** Above the quick start bar, the point bar displays the number of pages you have set up. The page you are currently on is highlighted.

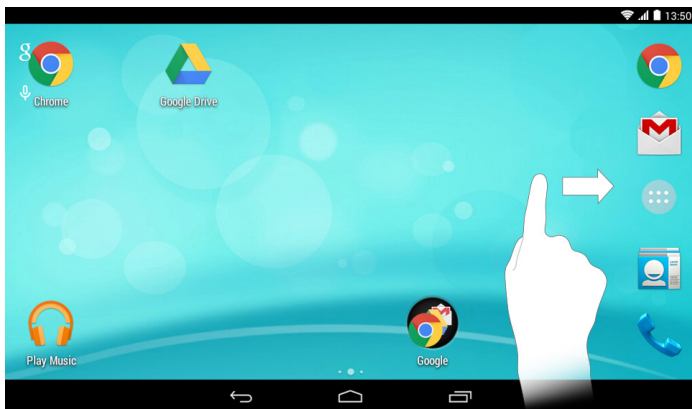

In an open window (for example, in a menu, browser, app or in folders), you "drag" the screen by sliding it in the direction you require with your finger.

**i** Use your fingers or a suitable display stylus (available in specialist shops) to operate the touch screen. Never use ordinary pens or other sharp objects.

## Selecting an element

 
To open an element or select an option, briefly touch the icon you require with your finger.



**i** If you want to close a recently used element (app, widget, menu), tap the display of all open elements. Place your finger on the element that you want to close and drag the element to the left or right to close it.

## Enlarging and reducing the view

You can enlarge the display of some views (images, websites etc.). Move two fingers apart on the screen to enlarge the display. In reverse, move two fingers towards each other on the screen to reduce the display again.

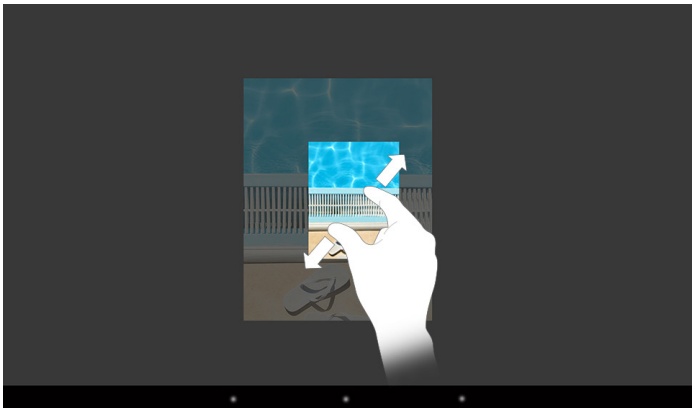

## Using the display keyboard

If you tap a text field in order to enter text (for example, a Web address), the display keyboard appears. Enter the text in the usual way via the keyboard. Use the "?123" and "~[<" buttons to enter numbers and special symbols. To enter an alternative letter (for example, a letter with an accent or German umlaut), press and hold a particular letter to view the available alternatives.

**i** You can specify further display keyboard settings under "SETTINGS" → "LANGUAGE & INPUT" → "KEYBOARD & INPUT METHODS".

## 10) Personalising the home screen

You can set up the home screen (as well as the additional pages) according to your wishes by adding or removing app shortcuts and widgets and altering the background.

## Adding apps to the home screen

- a) Tap the applications menu in the quick start bar on the home screen. A screen opens showing the apps that are currently available.
- b) Keep pressing the app that you have selected until the home screen appears.
- c) Now drag the selected icon to an empty position of your choice within the selected window. Drag the icon to the page edge to place it on another page.

**i** *You can move an icon placed on your home screen at any time. Hold your finger on the icon that you want to move until you can move it. You can now move the selected icon to any empty position within the indicated window.*

## Adding widgets to the home screen

In addition to apps, you can also add widgets to your home screen.

- a) Touch an empty area of the screen background until the "WIDGETS" symbol appears on the lower edge of the screen. Tap the symbol to display the available widget.
- b) Select the widget and hold it until the window that is currently active appears.
- c) Now drag the selected widget to an empty position of your choice. Drag the icon to the page edge to place it on another page.

## Removing apps and widgets from the home screen

- a) To remove an app or widget from the home screen, tap and hold the respective icon. "REMOVE" or "X" appears at the edge of the screen.
- b) Keep the icon pressed and drag it to "REMOVE" or "X" until this is highlighted in red.

**i** *This action deletes the link to the home screen but does not delete the app itself. To find out how you can completely remove an app from your SurfTab, see section 15.*

## Changing the screen background


- a) Touch an empty area of the screen background until "WALLPAPERS" appears on the lower edge of the screen. Tap the symbol to display the available backgrounds.
- b) Now scroll through the images, select a motif and confirm your selection via "SET WALLPAPER".


**i** *Use the "PICK IMAGE" icon to set one of your own images as the background.*

## 11) Setting up a screen lock

To make the data on your SurfTab more secure, we recommend that you set up a screen lock. Please proceed as follows:

- a) Select "SETTINGS" in the applications menu.
- b) Drag the list up until you can see the "SECURITY" menu item. Tap "SECURITY".
- c) Now tap "SCREEN LOCK".
- d) Now tap the type of screen lock that you require to then set it up.


 *Whenever you now unlock the screen, you will be prompted for the form of identification that you have set up.*


 *If you have forgotten your password, you can reset it using the recovery mode (see section 21).*

## 12) Connecting to the Internet via WiFi

You can connect your SurfTab to the Internet via WiFi. If you would like to establish a connection to a new wireless network, proceed as follows:

- a) Select "SETTINGS" from the applications menu or the quick menu. This is where you will find the "Wi-Fi" item.
- b) Slide the on/off switch from "OFF" to "ON".
- c) Tap "Wi-Fi". All available wireless networks will be displayed in the following window.
- d) Tap the network that you would like to connect to.  
An input window appears. Enter the network key ("PASSWORD") for the wireless network you have selected and tap "CONNECT".
- e) Your SurfTab will connect to the Internet via the wireless network you have selected. You can now surf the Internet using a browser app.

 *Once you have established a connection to a WiFi network, your SurfTab will automatically connect to it as soon as it is within reach. It is not necessary to re-enter the network key.*

 *To save power, it is advisable to turn off the WiFi function when it is not in use.*








## 13) Connecting to the Internet via 3G

The 3G function on your SurfTab means that you are independent of available WiFi networks. You connect to the network via your mobile communications provider.

### Inserting the SIM card

Only insert the SIM card when the device is completely switched off. The card will not be recognised if the device is in standby mode.

-  *It is advisable to use the mini SIM cards intended for the SIM slot rather than using adapters in order to prevent any mechanical faults.*
- a) Remove the cover on the rear side of your SurfTab by reaching into the slit intended for this and carefully pulling the cover upwards.
-  *Use your fingernail or a similarly thin lever to reach into the opening. Do not use any pointed or sharp-edged instruments.*
- b) Insert the SIM card from your data service provider into the SIM slot. The golden contacts on the SIM card should face downwards and the slanted corner should be in the bottom right.
-  *The illustration on the SIM slot provides further assistance in inserting the SIM card.*
-  *Do not insert any microSD/SDHC memory cards into the SIM slot! If a memory card does become stuck in the SIM slot, have it removed by a trained professional.*
- c) Replace the cover.
-  *When you switch on your SurfTab again after inserting the SIM card, you have to enter the corresponding PIN number.*

## Defining settings for 3G mode

There are various options for adjusting 3G mode to suit your requirements. These can be found under "SETTINGS".

### **SIM management**

Tap "SIM MANAGEMENT". This opens a menu with the following setting options:

#### **SIM Information**

Drag the slider to the right of your data service provider to "ON" in order to activate the data service.


 *By tapping the data service provider, you can retrieve and process your SIM card data.*

#### **Data connection**

You can deactivate the data connection by tapping "DATA CONNECTION".

#### **Roaming**

You can use this option to activate data roaming. Tap "ROAMING" and then "DATA ROAMING". Tap the box to the right of your data service provider if you would like to use data roaming. A blue check mark will appear.

 *If you allow roaming, high roaming charges can be incurred! Confirm the corresponding message with "OK".*

#### **Data usage**

You can limit your data usage here. To do so, tap your service provider.

#### **Mobile data**

Drag the slider to the right of "MOBILE DATA" to "ON" in order to activate the data service or to "OFF" to deactivate it.

#### **Set mobile data limit**

Tap the box to the right of "SET MOBILE DATA LIMIT" if you would like to limit your data usage. Confirm the message for "LIMITING DATA USAGE" by tapping "OK". A blue check mark will appear.

#### **Graphic**

If you have placed the check mark under "SET MOBILE DATA LIMIT", you can set both the data usage limit and a warning for when you reach a certain data volume on an activated SIM card. Tap the figure to set your required value.

## More Settings ...


Here you will find additional adjustment options (e. g., "Tethering & portable hotspot").

### Mobile networks

Tap "MOBILE NETWORKS" in order to set your preferred data connection rate. Under "NETWORK MODE", you can choose between the following options:


- |              |  |
|--------------|--|
| 2G/3G (auto) | Uses both 2G and 3G for data connection, preference is given to 3G, if available |
| 3G only      | Uses only 3G for data connection   |
| 2G only      | Uses only 2G for data connection   |

Select your desired method of connection by tapping the relevant option.


 *The "2G/3G (AUTO)" option is the optimum standard setting.*

### Removing the SIM card

a) Remove the cover on the rear side of your SurfTab by reaching into the slit intended for this purpose and carefully pulling the cover upwards.

 *Use your fingernail or a similarly thin lever to reach into the opening. Do not use any pointed or sharp-edged instruments.*

b) Press lightly on the visible end of the SIM card with your thumb and gently slide the SIM card out.

 *Round-headed tweezers can be useful for pulling out the SIM card. Do not use any pointed or sharp-edged instruments.*

c) Replace the cover.

## 14) Setting up/removing an email account

### Setting up an email account

a) Make sure that your SurfTab is connected to the Internet.

b) Select "E-MAIL" in the quick start bar or on the applications menu.

c) Enter a valid email address in the upper input field and the associated password in the lower input field.

d) Tap "NEXT" to confirm your entries.

- e) You can specify further account settings in the next steps. Confirm the settings that you have specified with "NEXT".

**i** *As soon as you have set up the account according to your wishes, the email app is ready for use.*

## Removing an email account

- a) Select "SETTINGS" in the applications menu.
- b) Drag the list up until you can see "ACCOUNTS" and tap the e-mail icon.
- c) Now tap the account that you wish to remove.
- d) Tap the three vertically stacked dots on the top right side and then select "REMOVE ACCOUNT".
- e) Confirm your selection once again via "REMOVE ACCOUNT" and the account will be deleted.

## 15) Installing/uninstalling apps

### Downloading and installing apps

Thanks to access to Google Play™, your SurfTab allows you to add further apps, widgets, programs and eBooks to the ones that are pre-installed.

The Play Store app is already installed on your SurfTab. You can find it on the applications menu and on the home screen.

**i** *To be able to download apps via the Google Play Store, you require a Google account. If you have not yet set up a Google account, a configuration assistant will start the first time you open the Play Store app. The configuration assistant will guide you through the process of setting up a Google account. You can link an existing Google account to the app or create a new Google account.*

After you have set up your Google account, the app is ready to help you download new apps. To download a new app, follow the instructions of the Play Store app.

As soon as you have installed an app, it will be visible on the applications menu. Either run the app from there or add it to your home screen.

**i** *To be able to download programs, apps or eBooks, your SurfTab has to be connected to the Internet.*

**i** *Some apps must be purchased before you can download them. The Google Play Store provides instructions on choosing the correct payment system and on making payments.*

## Uninstalling apps

To remove apps you have installed on your SurfTab, proceed as follows:

- a) Tap "SETTINGS" in the applications menu.
- b) Drag the menu up with your fingertip until you can see "APPS". Tap "APPS".
- c) Drag the menu to the left with your fingertip until you reach the "DOWNLOADED" or "ALL" category.
- d) Tap the app that you want to remove with your fingertip and select "UNINSTALL" in the window that appears. Confirm once more with "OK" and the app will be uninstalled.

**i** *You can only uninstall apps that you installed yourself. Factory-installed apps that are integrated into the system can only be "DISABLE". Deactivating apps that have been integrated into the system can impede the functionality of your SurfTab.*

## 16) Using the phone function

You will find a telephone receiver icon on the lower left side of the home screen in the quick launch bar. Tap it to make a call using the SurfTab like you do with your smartphone.

In phone mode, you will find the icon for accessing the numeric keypad at the bottom of the screen in the centre. At the bottom right of the screen, you can use the three items arranged below one another to access your contacts and settings for the phone function (for example, voice call or video call etc.). You can also add new contacts here.

## 17) Using navigation

The SurfTab is delivered with a built-in GPS module as well as a compass. This makes it perfect for navigation purposes.

### Navigating with the SurfTab

With the pre-installed standard navigation app or an appropriate app of your choice, you can use your SurfTab for navigation.

 
**i** *An appropriate application can be selected in the Google Play Store™.*

First, you need to provide your location information. To do this, go to "LOCATION" under "SETTINGS".

- a) Tap "LOCATION" and drag the slider on the right of "LOCATION" to "ON".
- b) This will open the "LOCATION CONSENT" window. Give permission to use your location by tapping "AGREE".

## 18) Using the camera

Tap the camera icon in the applications menu or in the quick start bar. The following screen appears:

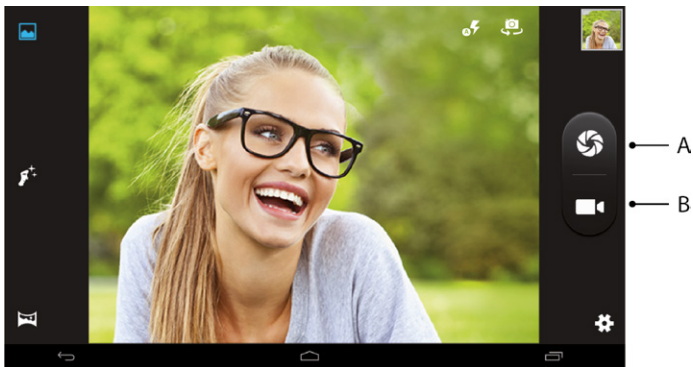

### Taking a photo

Hold the SurfTab with the camera in the required direction and press the shutter button (18 A). The picture is saved and the SurfTab briefly displays a preview of the photo.


#### Accessing additional camera settings

a) On the screen you will find various icons for shooting options. From the bottom left in a clockwise direction:




- Panorama mode
- Face beautification mode
- Standard mode
- Flash on/off
- Switch camera.

Tap the symbol to activate the respective mode.

b) The bottom-right corner shows options for camera modification and shooting (for example, exposure, colour effects, white balance, self-timer for photos, time lapse for videos etc.). Just tap the "SETTINGS" icon (cogwheel symbol).

 To exit the camera mode, briefly tap the edge of the display to show the task bar.

## Editing photos


- a) Briefly tap the lower edge of the display to show the task bar. Now tap the home icon to exit camera mode.
  - b) Open the gallery by tapping the "PHOTOS" symbol in the applications menu or in the quick start bar.
  - c) Now tap the photo that you would like to edit.  
The following symbol appears on the bottom left of the screen: 
  - d) Tap this symbol. Various editing options (regarding exposure, framing, cropping and colour settings) are now displayed beneath the photo.
  - e) Tap the desired option and save your change by tapping the checkmark on the top right of the screen and then confirming with "DONE" on the top left.
-  *The SurfTab now saves a new picture. The original picture is not overwritten.*
-  *The same options are available under the displayed pictures when you swipe from right to left across the screen in the camera app.*

## Recording a video

- a) In camera mode, select the video icon (18 B).
- b) Tap it to start or stop shooting the video.

## Zooming

You can zoom in on or out of your subject both in photo and in video mode. Move two fingers apart on the screen to zoom in and move two fingers towards each other again to zoom out.

-  *To exit the camera mode, briefly tap the home icon on the lower edge of the display.*

## 19) Connecting other devices

### Connecting the SurfTab to a computer

- a) Connect the SurfTab to your computer with the Micro-USB cable provided.
- b) A short moment later, the memory of the SurfTab will be shown as an external drive in your computer's file explorer. From here you can load, copy, delete or move files as usual.

## Connecting a USB device

External USB devices such as USB-Sticks can be connected directly via the Micro-USB socket of the SurfTab or by using a Micro-USB host adapter cable.

- i** *To be able to move files between your SurfTab and an external storage device, you need an app that functions as a file browser (such as the "ES FILE EXPLORER" or the "FILEBROWSER").*
- Connect the external USB storage device to the SurfTab and wait approximately 20 seconds.
  - You can now load, copy, delete or move files as usual using your file explorer app.
- i** *The power supply of the SurfTab may not be sufficient to ensure that all the functions of the connected USB device work properly. For this reason, make sure that you supply additional power to external USB devices via a charging cable.*

## Connecting another device via Bluetooth®

- Select "SETTINGS" in the applications menu. You will find the "BLUETOOTH" item in the menu column.
- Slide the on/off switch for Bluetooth from "OFF" to "ON".
- Tap "BLUETOOTH" with your fingertip.
- Activate the Bluetooth function on the device you want to connect and make the device visible to other Bluetooth devices, if necessary. To do so, refer to the instructions in the operating manual of the device.
- Tap "SEARCH FOR DEVICES" located at the top right of the screen. A list of all available Bluetooth devices in the vicinity will appear.
- Tap the device you want to connect. Then confirm by tapping "PAIR".
- You may also have to confirm pairing on the device you want to connect.

## Connecting to a television via Miracast™

Miracast technology is a peer-to-peer standard for image transfer. The SurfTab supports this standard and enables wireless transfer of image and sound from the SurfTab to a WiFi and Miracast-enabled television device.

- i** *The SurfTab can connect to your television via Miracast only if the television also supports Miracast technology. Please check with your television manufacturer if necessary.*



Proceed as follows to connect your SurfTab to a Miracast-enabled television:

- a) First, take all of the necessary steps to prepare your Miracast-enabled television for the Miracast transfer (consult your television's operating instructions for details).
- b) Select "SETTINGS" in the applications menu on the SurfTab.
- c) Activate the WiFi function on the SurfTab. To do so, select "Wi-Fi" and drag the on/off switch for WiFi from "OFF" to "ON".
- d) Further down in the menu column you will find the "DISPLAY" menu item. Tap "DISPLAY".
- e) Tap "CAST SCREEN".
- f) At the top right of the display you will find 3 vertically stacked dots. Tap here.
- g) Tap "ENABLE WIRELESS DISPLAY" in this window.
- h) A list of all available Miracast devices will appear. Tap the device that you wish to connect to.
- i) A short time later, the selected device will show the display of the SurfTab.

**i** *If your television device does not support Miracast technology, a "Miracast dongle" can be used to connect the SurfTab via Miracast. In this case, you must ensure that the selected dongle is compatible with both the SurfTab and your television.*

## 20) Activating standby mode

If you do not want to use your SurfTab for a while, press the on/off switch briefly to put the SurfTab into standby mode and save power. To exit standby mode, briefly press the on/off switch again.

Once you have reactivated the SurfTab, it will initially display the lock screen. Place your finger on the lock symbol and drag it to the right to the open lock. Your SurfTab will now display the home screen.

**i** *If you previously set up a screen lock, you must now identify yourself using the method that you chose in order to unlock the SurfTab.*

**i** *Standby mode is activated automatically when the SurfTab is not used for a certain time. You can specify the period of time after which the SurfTab automatically goes into standby mode under "SETTINGS" → "DISPLAY" → "SCREEN TIME OUT".*

## 21) Reset and recovery mode


### Resetting the SurfTab (Reset)

If your SurfTab freezes and no longer responds, you can force a shutdown by pressing and holding the on/off switch for approximately 10 seconds. Then you can switch the SurfTab on again as usual.

### Putting the SurfTab into recovery mode/loading the factory settings

The "recovery mode" allows you to reset the device to its factory settings, delete forgotten passwords or delete the memory of the SurfTab, for instance.

 *As system-related settings can be specified in recovery mode, you should only use this mode if you have the necessary technical knowledge.*

- a) Please switch off your SurfTab.
  - b) Press the "volume control +" button and keep it pressed.
  - c) Also press the on/off switch and keep it pressed.
  - d) As soon as the TrekStor logo appears, release both buttons.
  - e) The SurfTab now displays the recovery mode menu.
  - f) Use the volume control buttons to navigate through the menu and use the on/off switch to select an option.
-  *To restore the SurfTab to its factory settings, select the option "WIPE DATA/FACTORY RESET". Confirm your selection in the following menu by selecting "YES -- DELETE ALL USER DATA".*  
*WARNING: All the files that you have stored (photos, text files, bookmarks and so on) and the settings that you have specified (background, passwords and so on) will be deleted.*
- g) To exit the recovery mode, use the volume button to select the "REBOOT SYSTEM NOW" option and confirm by pressing the on/off switch. Your SurfTab now exits the recovery mode and restarts.

## 22) Switching off the SurfTab

- a) Press the on/off switch for approximately two to four seconds to switch off the device.
- b) Tap "POWER OFF".
- c) The following message appears: "POWER OFF/YOUR TABLET WILL BE SHUT DOWN". Tap "OK" to confirm and switch off the SurfTab.

## 23) Notes on copyright and trademarks

Copyright law prohibits the copying of the content of these operating instructions (illustrations, reference documents etc.), in whole or in part, without the permission of the copyright holder.

Android and Google Play are trademarks of Google Inc. Use of these trademarks is subject to Google Permissions.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by TrekStor GmbH is under license. Other trademarks and trade names are those of their respective owners.

Mac OS and OS X are trademarks of Apple Inc., registered in the U.S. and other countries.

Microsoft, Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Linux is the registered trademark of Linus Torvalds in the U.S. and other countries.

PowerVR is a trademark or registered trademark of Imagination Technologies Limited. All other logos, products, trademarks and registered trademarks are the property of their respective owners.

TrekStor and SurfTab are registered trademarks of TrekStor Ltd. in the European Community and other countries.

Copyright © 2015 TrekStor GmbH. All rights reserved. Some product or company names mentioned elsewhere may be brand names or trade names of the respective proprietor.

## Open Source Software

This product contains software which might in whole or in part be free software under license of Free Software Foundation (FSF). This is subject to terms and conditions of GNU General Public License (GPL) as well as Lesser General Public License (LGPL).

For further information visit: <http://www.gnu.org/licenses/gpl>

For additional informations concerning Source Code please consult: [www.trekstor.de/opensource/](http://www.trekstor.de/opensource/)

### **Disclaimer of liability**

Since this is concerning free software Contributor does not give any guarantee about free software as far as permitted by law.

Please be aware that this disclaimer is not concerning regular use of hardware and regular warranty of this device itself.

## 24) Notes on disposal

### Disposal



*This symbol indicates that this product and/or the battery used contain components that are harmful to the environment and/or human health if not disposed of correctly. As the owner of a used electrical or electronic device, you may not dispose of this device together with unsorted domestic waste.*



*Remove the battery from the device before disposing of your old device. Contact your city or municipal authority for information on how to correctly dispose of the device and its battery.*

### Recycling



*Your device and its sales packaging consist of valuable raw materials, which must be recycled in the interest of environmental protection. Contact your city or municipal authority for information on the correct method of disposal.*

## 25) Notes on liability and warranty

The manufacturer shall reserve the right to constantly further develop the product. These changes may be made without any direct reference to them in the operating instructions. As a result, the information contained in the operating instructions does not need to reflect the current technical design.

The statutory warranty period for consumer products is 24 months. There is no warranty beyond this.

Unauthorised modifications to the device (particularly installing external firmware not approved by the manufacturer or modifications to the device hardware) may result in a loss of all warranty claims.

# EC DECLARATION OF CONFORMITY

As manufacturer and importer respectively:

**TrekStor GmbH, Kastanienallee 8 - 10, D-64653 Lorsch, Germany**

herewith declares that the products

**Product:** SurfTab breeze 7.0 quad 3G (ST70408-3)

**Type:** Mobile Internet Device

comply with the following directive(s):

- |              |  |
|--------------|--|
| •99/5/EC     | <b>Radio Equipment and Telecommunications Terminal Equipment</b>         |
| •2004/108/EC | <b>EMC Directive: Electromagnetic Compatibility</b>                      |
| •2009/125/EC | <b>Ecodesign and energy labeling</b>                                     |
| •2011/65/EU  | <b>RoHS: Hazardous substances in electrical and electronic equipment</b> |
| •2006/95/EC  | <b>Low Voltage Directive</b>   |

The following norms were consulted to assess conformity:

- |   |  |
|---|--|
| • EN 300 328 V1.7.1                               | Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques  |
| • EN 301 489-1 V1.9.2 EMC and ERM                 | Part 1: Common technical requirements  |
| • EN 301 489-3 V1.4.1 EMC and ERM                 | Part 3: Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 kHz and 40 GHz  |
| • EN 301 489-7 V1.3.1 EMC and ERM                 | Part 7: Specific conditions for equipment of digital cellular radio telecommunications systems (GSM and DCS)   |
| • EN 301 489-17 V2.2.1 EMC and ERM                | Part 17: Specific conditions for 2,4 GHz wideband transmission systems   |
| • EN 301 489-24 V1.5.1 EMC and ERM                | Part 24: Specific conditions for IMT-2000 CDMA Direct Spread (UTRA and E-UTRA)   |
| • EN 301 511 V9.0.2 GSM                           | Harmonized EN for mobile stations in the GSM 900 and GSM 1800 bands  |
| • EN 301 908-1 V6.2.1 WCDMA                       | IMT cellular networks; Harmonized EN; Part 1: Introduction and common requirements   |
| • EN 301 908-2 V5.2.1 WCDMA                       | IMT cellular networks; Harmonized EN; Part 2: CDMA Direct Spread (UTRA FDD) User Equipment (UE)  |
| • EN 300 440-1 V1.6.1 GPS                         | Radio equipment to be used in the 1 GHz to 40 GHz frequency range;<br>Part 1: Technical characteristics and test methods   |
| • EN 300 440-2 V1.4.1 GPS                         | Radio equipment to be used in the 1 GHz to 40 GHz frequency range;<br>Part 2: Harmonized EN covering the essential requirements  |
| • EN 62209-1:2006 SAR                             | Instrumentation and Procedures, Part 1: SAR in close proximity to the human ear (300 MHz to 3GHz)  |
| • EN 62209-2:2010 SAR                             | Instrumentation and Procedures, Part 2: SAR in close proximity to the human body (frequency range of 30 MHz to 6 GHz).   |
| • EN 50360:2001 + A1:2012 SAR                     | Basic restrictions related to human exposure to electromagnetic fields (300 MHz - 3 GHz) especially usage of the device in the near of the human ear.                          |
| • EN 50566:2013 SAR                               | Product standard to demonstrate compliance of radio frequency fields from handheld and body-mounted wireless communication devices used by the general public (30 MHz - 6 GHz) |
| • EN 62479:2010 SAR                               | Basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz)   |
| • EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 | Information technology equipment – Safety – Part 1: General requirements   |

The CE symbol confirms that this product conforms with the above mentioned norms and regulations.

The manufacturer also declares the conformity of the product according to the following directives:

- 2006/1907/EC REACH: Regulation concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals
- 2013/1272/EU PAH: REACH relating to polycyclic aromatic hydrocarbons

## Supportinformationen

### Sollten Sie Fragen zu Ihrem TrekStor Produkt haben, gehen Sie bitte wie folgt vor:

- Überprüfen Sie anhand der Produkteigenschaften und der Funktionen Ihres Gerätes (auf der Verpackung ersichtlich), ob Sie die richtigen Einstellungen vorgenommen haben.
- Lesen Sie aufmerksam die gesamte Bedienungsanleitung.
- Informieren Sie sich auf unserer Website [www.trekstor.de](http://www.trekstor.de) über aktuelle Informationen zu Ihrem Produkt (z. B. neu verfügbare Firmware-Updates).

### Wenn Sie weitergehende Fragen zu Ihrem Produkt haben, beachten Sie bitte die folgenden TrekStor Supportoptionen:

- FAQ** Der FAQ-Bereich unserer Website bietet Ihnen vielfältige Problemlösungshinweise. Hier erhalten Sie Antworten zu den am häufigsten gestellten Fragen zu unseren Produkten.
- E-Mail** Füllen Sie das Supportformular auf unserer Website aus oder senden Sie eine E-Mail an [support.de@trekstor.de](mailto:support.de@trekstor.de).
- Telefonsupport** Von Deutschland aus wählen Sie bitte **01805-TREKSTOR\***, **01805-87357867\***. Die Nummer der Supporthotline für andere Länder finden Sie auf unserer Website unter "SERVICE".
- \* 14 Cent/Min. aus dem deutschen Festnetz der DTAG, max. 42 Cent/Min. aus Mobilfunknetzen.

## Support information

### If you have any questions regarding your TrekStor product, please proceed as follows:

- Check the features as well as the functions of your device (apparent on the packaging), in order to use the correct settings.
- Read the manual carefully.
- Inform yourself on our website [www.trekstor.de/en](http://www.trekstor.de/en) about the up-to-date information concerning your product (e. g. available most recent firmware releases).

### In the case you have further questions regarding your product, please note the following TrekStor support options:

- FAQ** The FAQ area of our website offers you a wide range of problem solving hints. Here you can obtain answers to the most frequently asked questions concerning our products.
- E-Mail** Please fill in the support form on our website or send an E-Mail to [support.en@trekstor.de](mailto:support.en@trekstor.de). You can find mailing addresses for other countries when you click "SERVICE" at the menu bar on our website.
- Phone support** Please find the number of the support hotline for your country on our website under "SERVICE" as well.

**TrekStor GmbH**  
Kastanienallee 8-10  
D-64653 Lorsch, Germany

[www.trekstor.de](http://www.trekstor.de)



**CE 0700**

BA-STB70Q3G-V1-10-EN-150806