

**TREKSTOR**<sup>®</sup>  
Enjoy now.



**Bluetooth**<sup>®</sup> SoundBall 2in1

# USER MANUAL

We wish you a lot of fun with TrekStor Bluetooth® SoundBall 2in1. Please read the following instructions carefully so that you can become acquainted with the functions of this product and its use.

Current product information can be found at the TrekStor website <http://www.trekstor.de>. Other products and accessories are available at [www.trekstor-onlineshop.de](http://www.trekstor-onlineshop.de).

## 1) General

It is essential to observe the safety and usage instructions listed in Chapter 3 of this Quick Guide.

Keep this Quick Guide and hand it over to the next owner when passing the device to them.

Use the device only for its intended purposes (see Chapter 2). The manufacturer accepts no liability for any damage resulting from non-intended use of the device. Furthermore, the manufacturer accepts no liability for damaged or lost data and all consequential damages.

The manufacturer retains the right to continually improve the product. These changes may be made without being directly described in these operating instructions. For this reason, the information provided in these operating instructions may not reflect the current state of the art.

## 2) Safety instructions



**Attention:** Do not use or charge the device if the battery is damaged or leaks.



**Attention:** This device is capable of loud volumes. In order to avoid hearing damage, able to occur immediately, later, or gradually over time, you should not listen at high volumes for prolonged periods. Please be aware that permanent damage to the hearing can also first appear at a later juncture. Sometimes you can become acclimatized to higher volumes over time. These may appear normal for you; your hearing, however, may already have been adversely affected. Louder volumes can lead to your hearing being damaged faster.



**Attention:** Your safety is very important to us! Safety always has first priority in road transport. Protect yourself and other road users by operating the SoundBox 2in1 only if the traffic situation allows it and you do not endanger or hinder anyone. Adjust the volume of the device for your safety so that you can continue to react to all the sounds around you. Local legislation in force applies.



Only qualified persons may perform technical work on the product. The product may not be opened or changed. The components cannot be serviced by the user.



Protect the device from extremely high and low temperatures and temperature fluctuations. Use the device within an ambient temperature of 10° C until 40° C.



Never place the device close to a source of heat, and protect it from direct sunlight.



Never clean the surface of the device with solvents, paint thinners, cleansers or other chemical products.



When attaching the device by means of the suction cup, ensure that the suction cup surface and the surface that the SoundBall 2in1 is to be attached to are smooth, clean and grease-free. To release the suction cup, always use the tab provided; do not pull directly on the product!

### 3) About TrekStor Bluetooth® SoundBall 2in1

TrekStor Bluetooth® SoundBall 2in1, is a portable, splashwater-protected (IP X4) Bluetooth® loudspeaker that can function as a speakerphone. Paired with a Bluetooth®-enabled mobile phone or other Bluetooth®-enabled device, the TrekStor Bluetooth® SoundBall 2in1 creates reliable and fast connections and wirelessly transmits music and phone calls.

**i** The color of the built-in status-LED (D) may vary, depending on the model of the SoundBall 2in1. The red and white colors described in the manual may therefore be two other colors in your specific model.


### 4) Package contents

- TrekStor Bluetooth® SoundBall 2in1
- USB charging cable (Micro-USB / USB-A)
- User manual

### 5) Specifications

- Dimensions (Ø x H) : 68 mm x 70 mm
- Weight (only the device without cables): 118 g
- Type of housing: Plastic and Rubber
- Battery (Type and capacity): Lithium-Polymer, 500 mAh
- Interface: Micro-USB charging socket, Bluetooth®

### 6) Controls and Connections

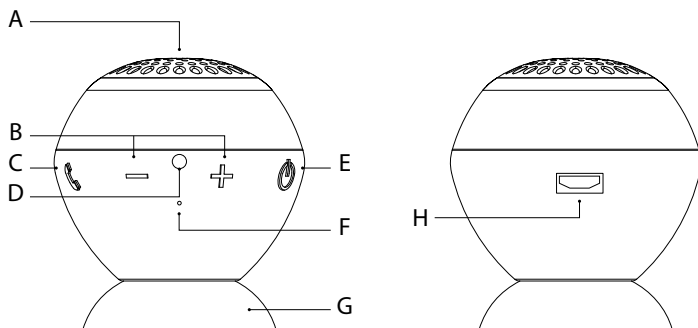

A) Speaker

B) Volume control + title selector ("- / "+" )

C) Multi-function key

- D) Status-LED, bicolor
- E) ON/OFF switch
- F) Microfone
- G) Suction cup with tab
- H) Micro-USB charging socket

## 7) Charging SoundBall 2in1

Connect the micro-USB charging cable with the micro-USB charging socket (H) on the SoundBall 2in1 and with a PC or a USB adapter for the power outlet. While charging, the LED is red. Once the device is fully charged, the red LED turns off.

- i** *If the battery becomes low, the red LED lights up every 4 seconds, and a warning signal sounds. Charge SoundBall 2in1 as described above.*
- i** *The maximum battery life becomes available after about 10 charge cycles.*

## 8) Turning on SoundBall 2in1

Press the ON/OFF switch (A) for 4 seconds until an ascending tone sounds. SoundBall 2in1 is now on and in standby mode. The Bluetooth® function is now active and the status LED flashes white rapidly.

## 9) Pairing SoundBall 2in1 with a Bluetooth® device.

- a) Place the SoundBall 2in1 about one meter away from your device.
- b) Turn the SoundBall 2in1 on (see 8).
- c) Enable the Bluetooth® function on your device. For more information, please refer to your device's user manual.
- d) If necessary, set up your device's visibility to other Bluetooth® devices.
- e) Enable your device to search for other active Bluetooth® devices in the vicinity.
- f) Select "Sound Ball" from the list of available Bluetooth® devices on your device, and pair your device with the SoundBall 2in1.
- g) Once the device and the SoundBall 2in1 are paired, you will hear a short beep and the LED will flash white every 2 seconds..

- i** *When using Bluetooth®, ensure that the distance between the SoundBall 2in1 and the paired device is not more than 10m.*
- i** *You can break the connection by either disabling the Bluetooth® function of your device, or by turning off the SoundBall 2in1.*

## 10) Broadcasting music via SoundBall 2in1

- a) Turn on the SoundBall 2in1 (see 8) and connect the SoundBall 2in1 to your device (see 9).

- b) Start the music playback on your device. The music played will be played automatically on your SoundBall 2in1.
- i** *For some devices, the playback medium must first be determined. Select "SoundBall" as the playback medium in the menu displayed.*
- c) During playback, you can adjust the volume by briefly "+" or "-" on the volume control (B).
- d) To skip to the next or previous track in the current playlist of the paired device, press either "+" or "-" on the volume control (B) for 3-4 seconds.
- e) To pause playback, briefly press the multi-function key (C). To resume playing, briefly press the multi-function key again.
- i** *When using Bluetooth®, ensure that the distance between the SoundBall 2in1 and the paired device is not more than 10m.*

## 11) Using the speakerphone function of the SoundBall 2in1

Make sure that your mobile phone and the SoundBall 2in1 are paired (see 9). When a call comes in on your mobile phone, you will hear a ringtone on the SoundBall 2in1. You can now utilize the telephony functions on the SoundBall 2in1 itself:

### Answering an incoming call

Briefly press the multi-function key (C) to answer the call and make the call via the microphone and the speaker on the SoundBall 2in1. To change the volume, briefly press "+" or "-" on the volume control (B).

### Making a call

The SoundBall 2in1 offers you the opportunity to use its controls to make a call. Press the multi-function button (C) for approximately 3-4 seconds. You will hear a short beep and you will hear the dialing tone on the speakers of the SoundBall 2in1 while your phone picks up the call.

- i** *Depending on the model of the paired mobile phones, either the first phone number in the phone numbers list on paired phones or the last dialed number on the paired mobile phone number will be dialed.*

### Ending a Call

To end a call, briefly press the multi-function key (C). You will hear a short tone, and the current call will be terminated.

### Rejecting an incoming call

You can reject an incoming call by pressing the multi-function key (C) for about 2-3 seconds. You will hear a brief, descending sequence of tones and the call will be rejected.

- i** *All telephony functions of the SoundBall 2in1 are also available if you simultaneously play music from the coupled phone on the SoundBall 2in1. When a call comes in, or when you make a call, the music playback is muted. After the call is ended, the SoundBall 2in1 automatically resumes the playback.*
- i** *When using Bluetooth®, ensure that the distance between the SoundBall 2in1 and the paired device is not more than 10m.*

## 12) Turning off SoundBall 2in1

Hold the ON/OFF switch (E) pressed for approx. three seconds until a descending tone sounds. SoundBall 2in1 will turn off.

## 13) Copyright and Trademark Notices

Copyright laws prohibit copying any contents of this manual (illustrations, related documents etc.) in whole or in parts without the permission of the copyright holder.

Additionally, the use of the contents of this manual are not allowed without TrekStor® GmbH's permission except for personal use.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc. and any use of such marks by TrekStor GmbH is under license. Other trademarks and trade names are those of their respective owners.

Copyright © 2013 TrekStor GmbH. All rights reserved. Other cited product or company names may be trademarks or brand names of the respective owner.

# Akku-Entsorgung

## Informationspflicht gemäß Batterieverordnung (BattV)

Batterien und Akkus gehören nicht in den Hausmüll. Der Verbraucher ist dazu verpflichtet, nicht mehr verwendete Batterien und Akkus ordnungsgemäß zurückzugeben. Lassen Sie diese bitte nur über den Fachhandel oder durch Batteriesammelstellen entsorgen. Hier leisten Sie einen konkreten Beitrag zum Umweltschutz.

Seit 1998 verpflichtet die Deutsche Batterieverordnung alle Bürgerinnen und Bürger, verbrauchte Batterien und Akkus ausschließlich über den Handel oder speziell dafür eingerichtete Sammelstellen zu entsorgen (gesetzliche Rückgabepflicht).

Handel und Hersteller sind verpflichtet, diese Batterien und Akkus unentgeltlich zurückzunehmen und ordnungsgemäß zu verwerten oder als Sondermüll zu beseitigen (gesetzliche Rücknahmepflicht).

 Der verbaute Li-Polymer Akku dieses Geräts ist mit dem nebenstehenden Zeichen, bestehend aus einer durchgestrichenen Mülltonne und der Art des verwendeten Akkus gekennzeichnet.

## Akku ausbauen

 *Bevor Sie Ihr ausgedientes Gerät zur Entsorgung geben, muss der Akku aus dem Gerät entfernt werden.*


# Battery disposal

## Reporting requirement according to the Battery Directive (BattV)

Batteries are not part of the domestic waste. The consumer is obliged to return no longer used batteries properly. Please dispose of them by a specialized trade or a battery collection point. Hereby you make an important contribution to environmental protection.

Since 1998 the German Battery Directive compels all citizens to dispose of used batteries exclusively through the trader or specially equipped departments (legal return obligation).

Trade and manufacturers are committed to take back batteries for free and to exploit it properly or to remove it as special waste (legal take-back obligation).

 The built-in lithium-polymer battery of this device is marked with the adjoining symbol, consisting of a crossed out bin and the used battery type.

## Remove battery

 *Before you return a disused device for disposal, the battery has to be removed from the device.*

# EC DECLARATION OF CONFORMITY

As manufacturer and importer respectively:

**TrekStor GmbH**  
Kastanienallee 8 - 10  
D-64653 Lorsch, Germany

herewith declares that the products

**Product:** Bluetooth® SoundBall 2in1

**Type:** Bluetooth® Speaker Device

comply with the following directive(s):

- **1999/5/EC** Radio Equipment and Telecommunications Terminal Equipment
- **2004/108/EC** EMC Directive: Electromagnetic Compatibility
- **2006/95/EC** Low Voltage Directive

The following norms were consulted to assess conformity:

- **EN 300 328 V1.8.1**  
Electromagnetic compatibility and Radio spectrum Matters (ERM); Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques
- **EN 301 489-1 V1.9.2**  
EMC and ERM: EMC standard for radio equipment and services; Part 1: Common technical requirements
- **EN 301 489-17 V2.2.1**  
Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment; Part 17: Specific conditions for 2,4 GHz wideband transmission systems.
- **EN 60065:2002/AC:2007**  
Audio, video and similar electronic apparatus – Safety requirements

The CE symbol confirms that this product conforms with the above mentioned norms and regulations.

The manufacturer also declares the conformity of the product according to the following directives:

- **2001/95/EC** **General Product Safety**
- **2002/95/EC** **RoHS: Hazardous substances in electrical and electronic equipment**
- **2009/125/EC** **Ecodesign requirements for energy-using products**

Lorsch, 04.07.2013



Thorsten Koroscha, LPM





## Supportinformationen

### Sollten Sie Fragen zu Ihrem TrekStor Produkt haben, gehen Sie bitte wie folgt vor:

- Überprüfen Sie anhand der Produkteigenschaften und der Funktionen Ihres Gerätes (auf der Verpackung ersichtlich), ob Sie die richtigen Einstellungen vorgenommen haben.
- Lesen Sie aufmerksam die gesamte Bedienungsanleitung.
- Informieren Sie sich auf unserer Website **www.trekstor.de** über aktuelle Informationen zu Ihrem Produkt (z. B. neu verfügbare Firmware-Updates).

### Wenn Sie weitergehende Fragen zu Ihrem Produkt haben, beachten Sie bitte die folgenden TrekStor Supportoptionen:

**FAQ** Der FAQ-Bereich unserer Website bietet Ihnen vielfältige Problemlösungshinweise. Hier erhalten Sie Antworten zu den am häufigsten gestellten Fragen zu unseren Produkten.

**E-Mail** Füllen Sie das Supportformular auf unserer Website aus oder senden Sie eine E-Mail an **support.de@trekstor.de**.

**Telefonsupport** Von Deutschland aus wählen Sie bitte **01805-TREKSTOR\***, **01805-87357867\***. Die Nummer der Supporthotline für andere Länder finden Sie auf unserer Website unter "SERVICE".

\* 14 Cent/Min. aus dem deutschen Festnetz der DTAG, max. 42 Cent/Min. aus Mobilfunknetzen.

## Support information

### If you have any questions regarding your TrekStor product, please proceed as follows:

- Check the features as well as the functions of your device (apparent on the packaging), in order to use the correct settings.
- Read the manual carefully.
- Inform yourself on our website **www.trekstor.de/en** about the up-to-date information concerning your product (e. g. available most recent firmware releases).

### In the case you have further questions regarding your product, please note the following TrekStor support options:

**FAQ** The FAQ area of our website offers you a wide range of problem solving hints. Here you can obtain answers to the most frequently asked questions concerning our products.

**E-Mail** Please fill in the support form on our website or send an E-Mail to **support.en@trekstor.de**. You can find mailing addresses for other countries when you click "SERVICE" at the menu bar on our website.

**Phone support** Please find the number of the support hotline for your country on our website under "SERVICE" as well.